

Broil King®



Broil King.
REGAL 420
9562-52
9562-53



Broil King.
REGAL 440
9562-63NZ



Broil King.
REGAL 490
9562-82
9562-83
9562-83NZ



Broil King.
REGAL 420 PRO
9563-12
9563-13

 
 
 
 


Broil King.
REGAL 440 PRO
9563-22
9563-23



Broil King.
REGAL 490 PRO
9563-42
9563-43

1



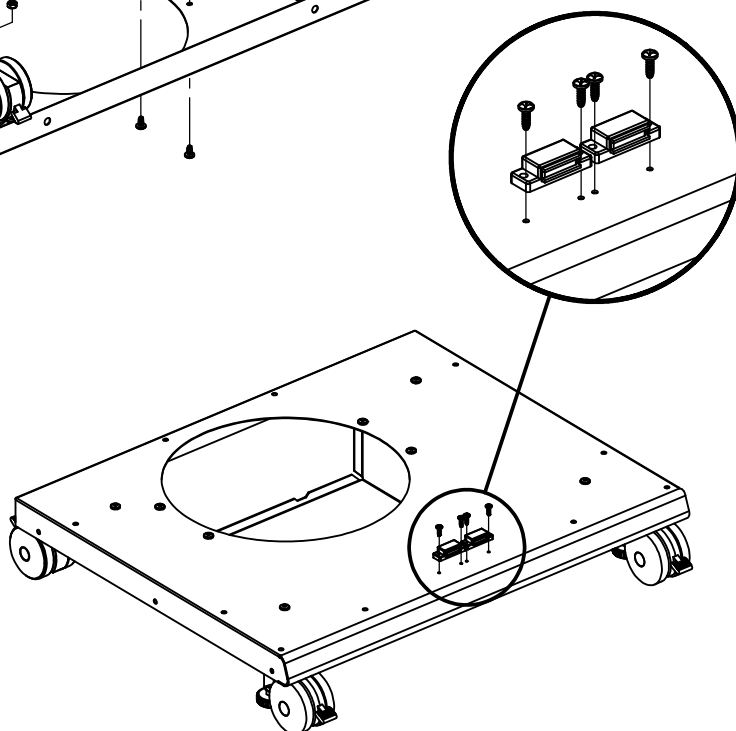
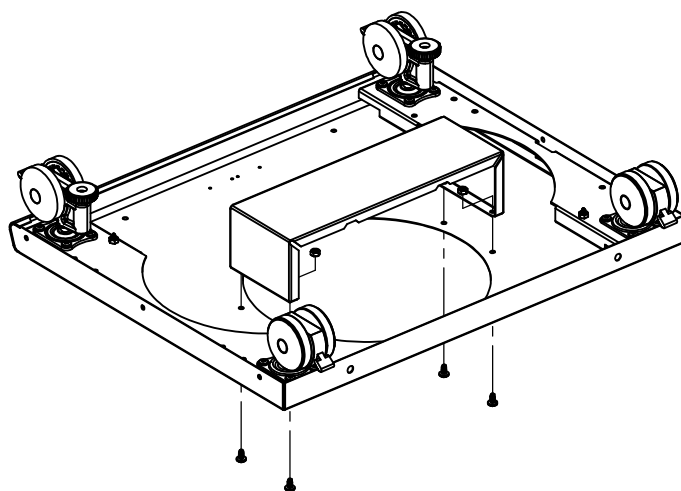
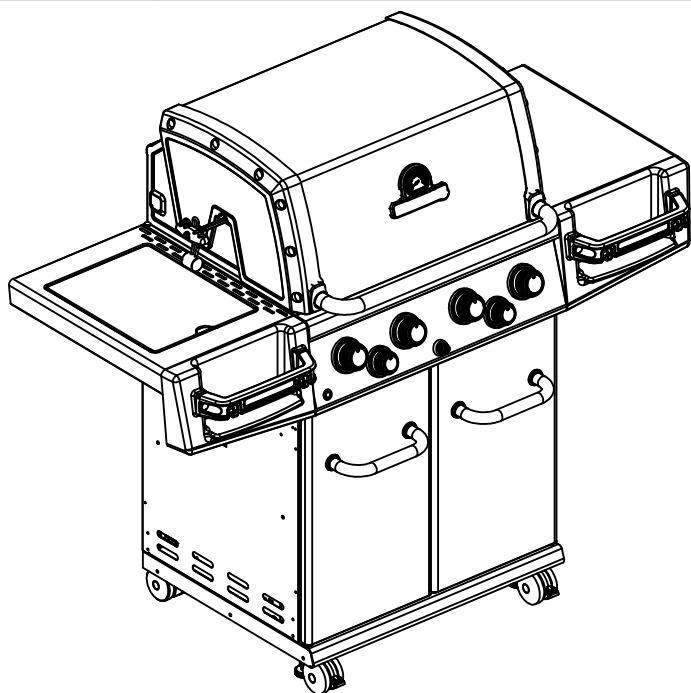
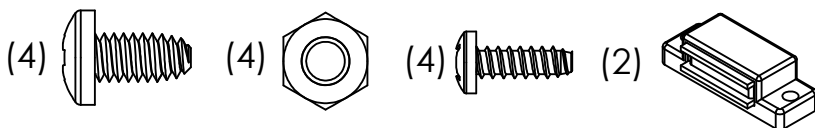


2

(2)






      (2)

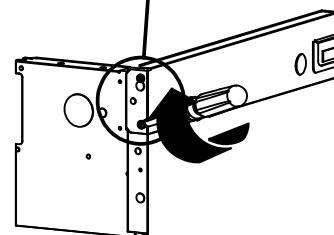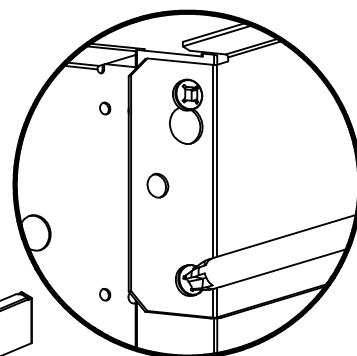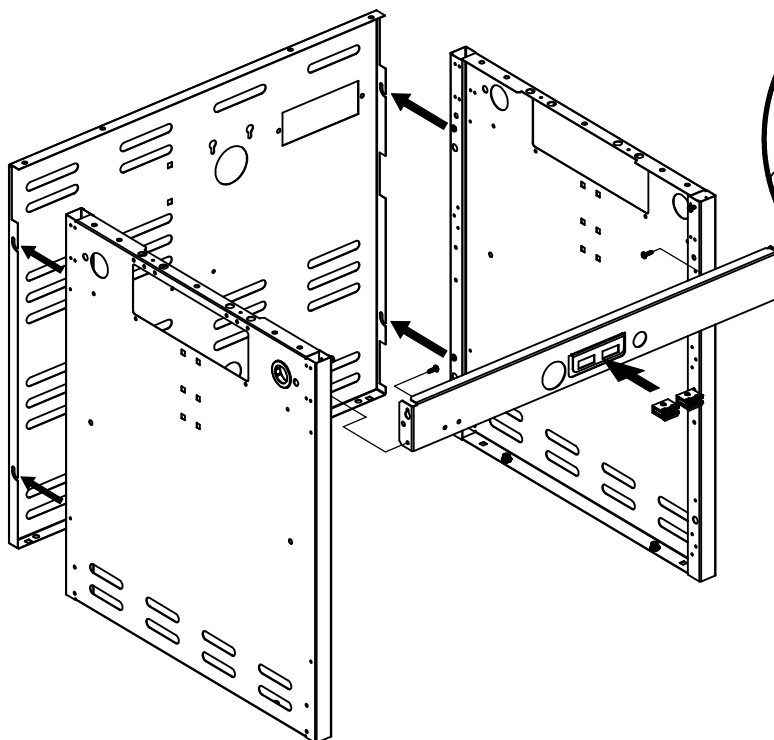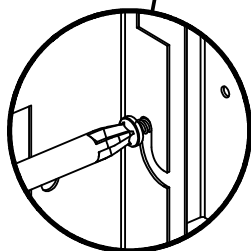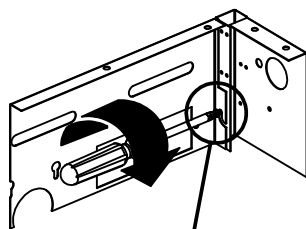





3

   (4)

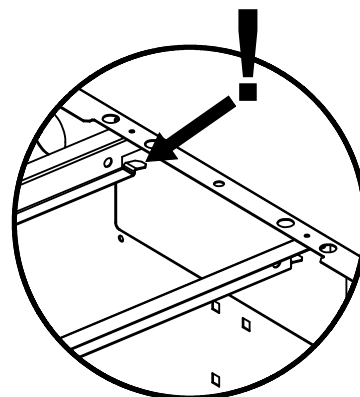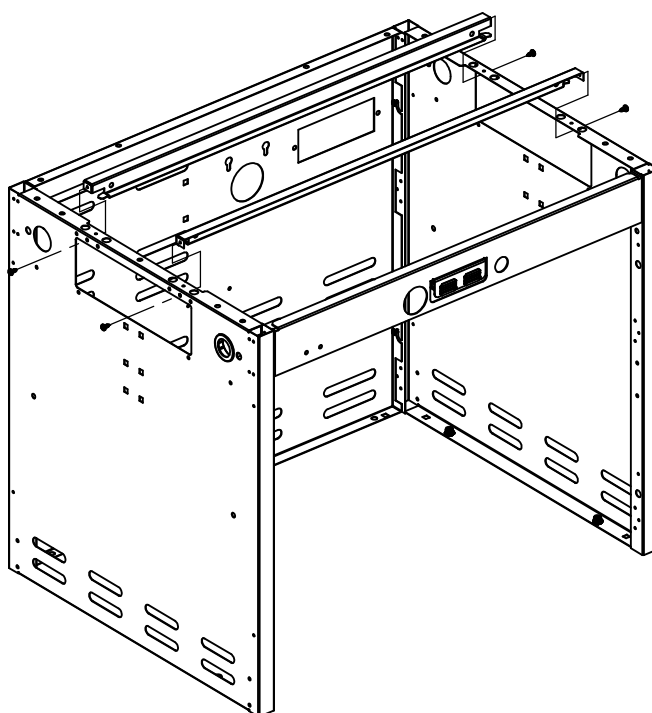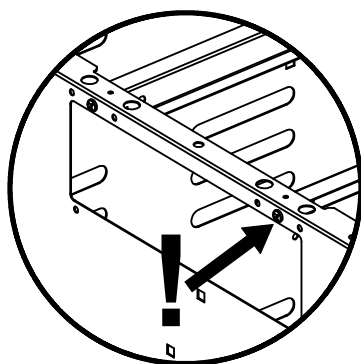




4

    (6)

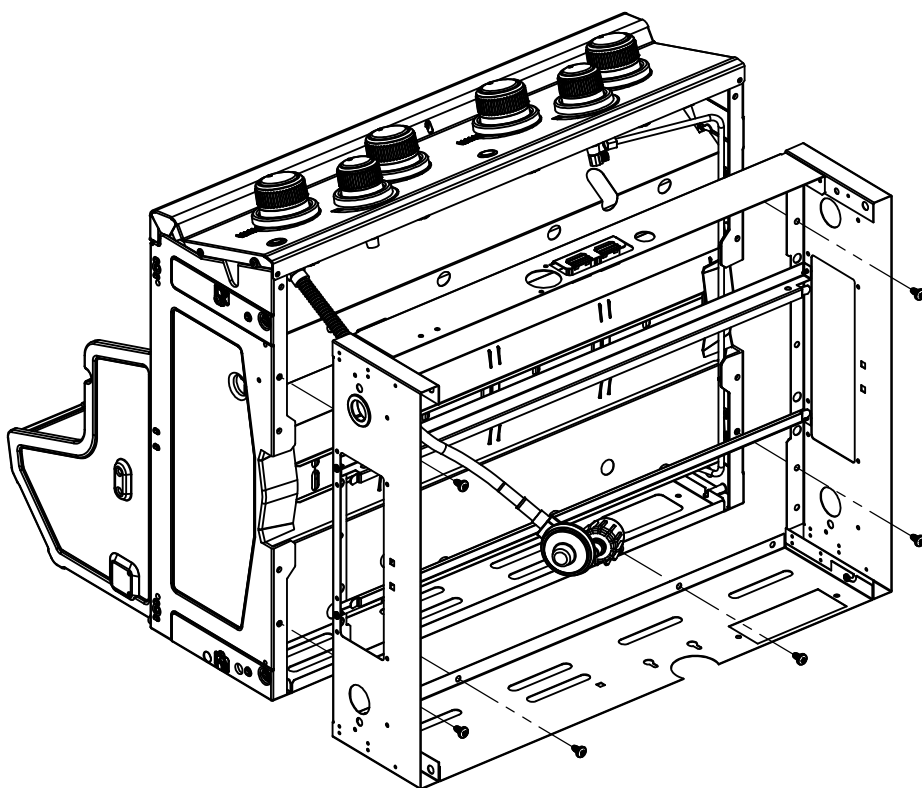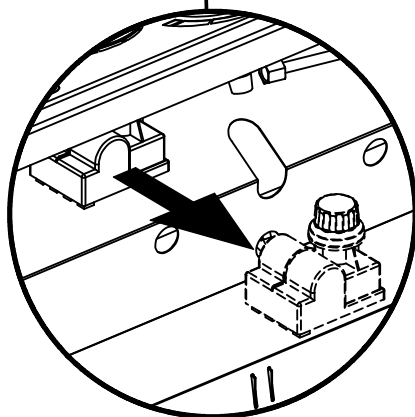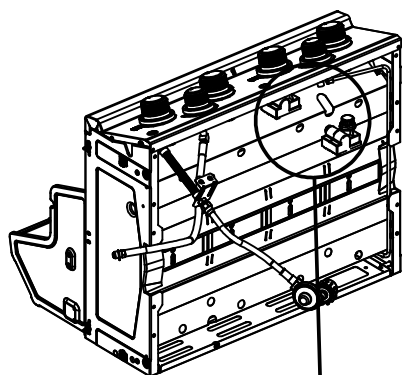


5

  
 
(2)

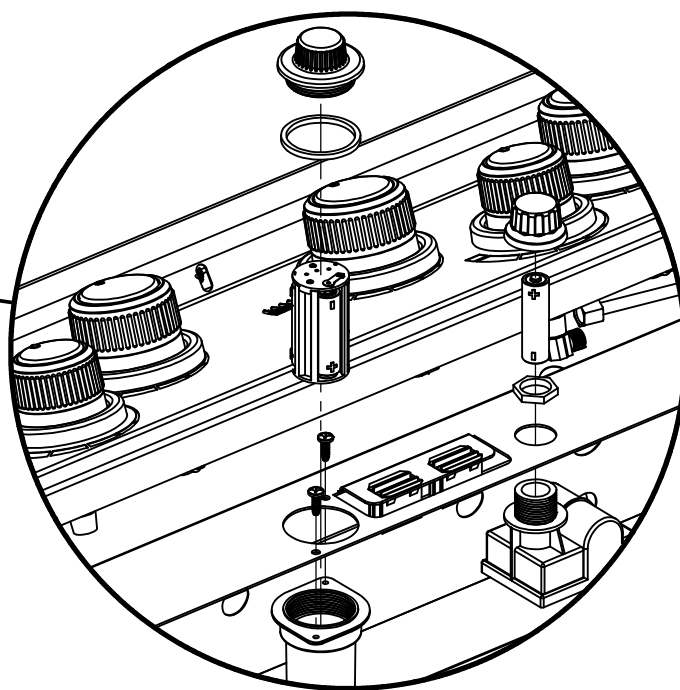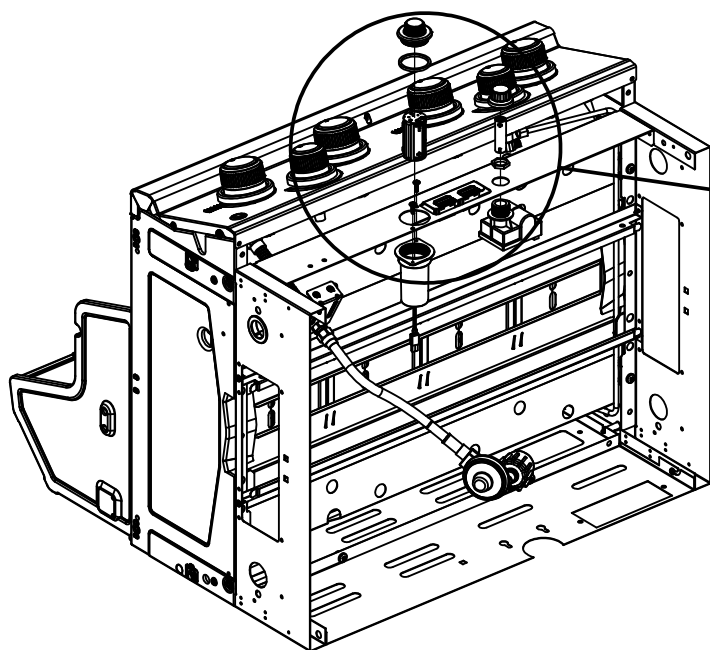



6

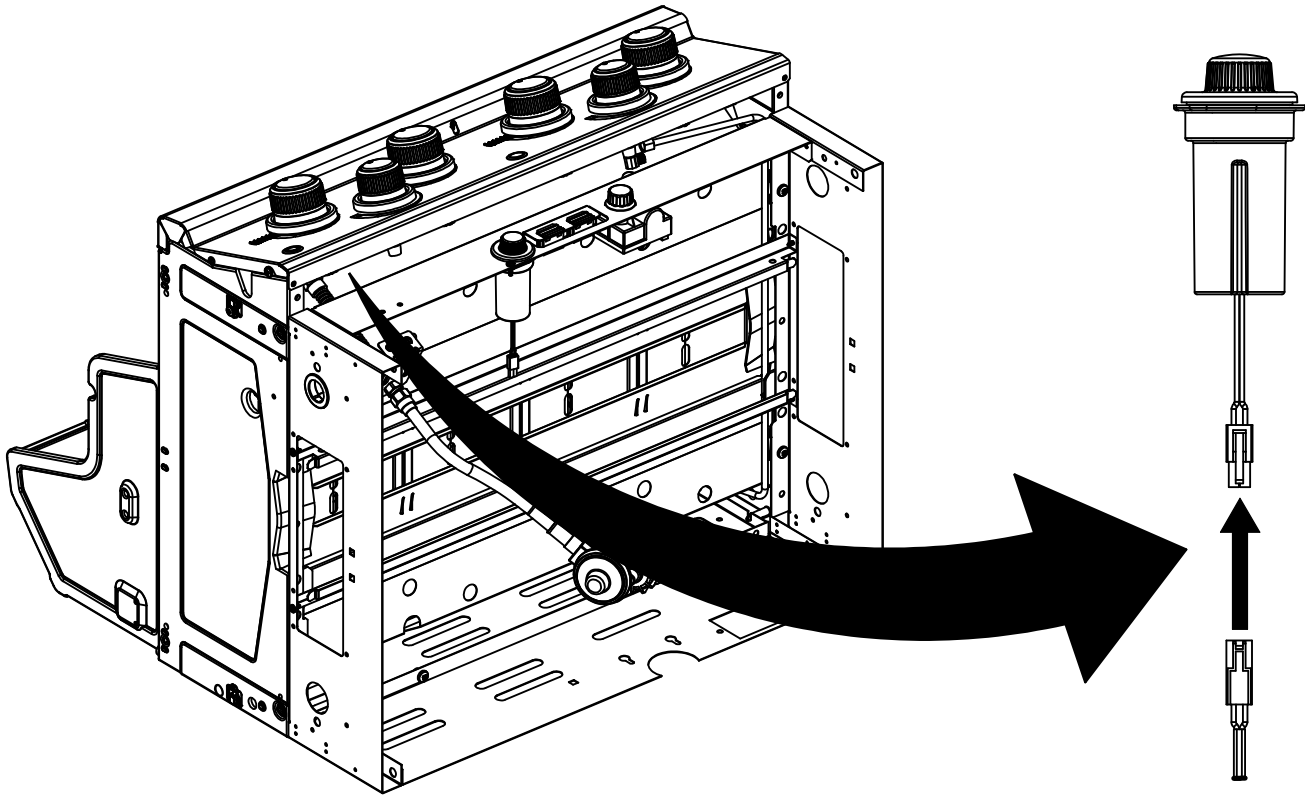 

7

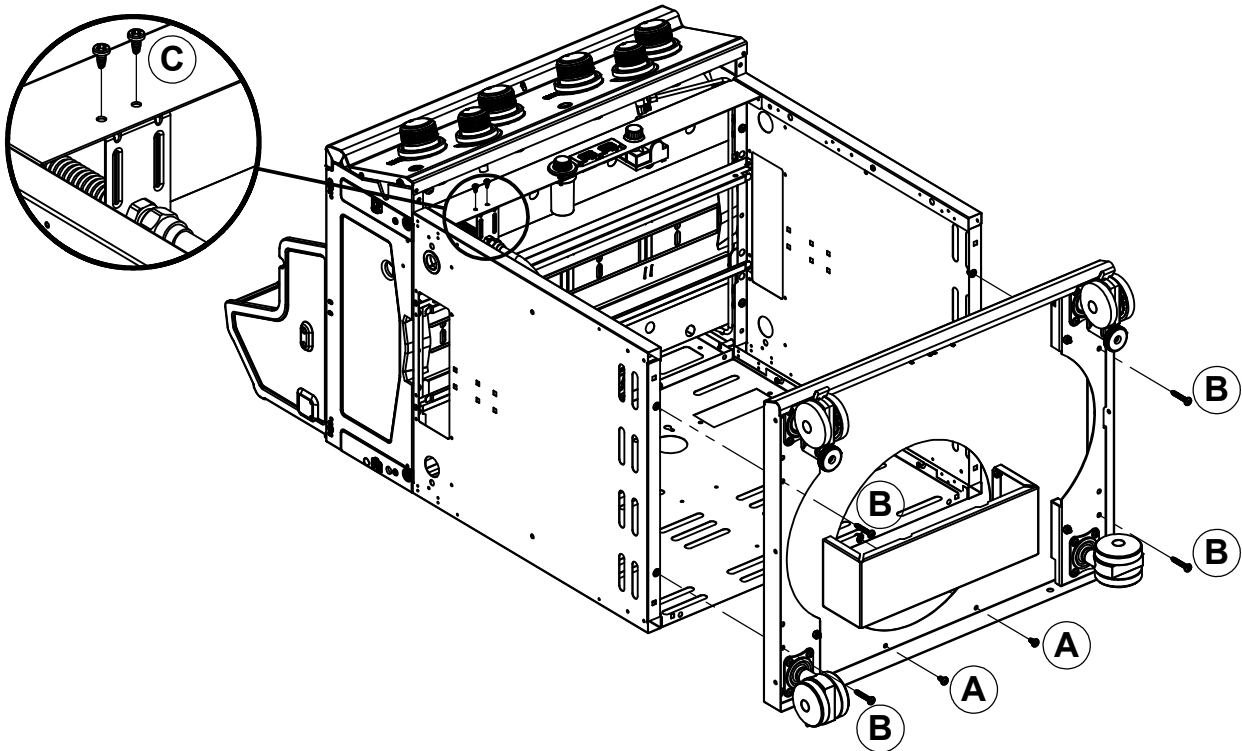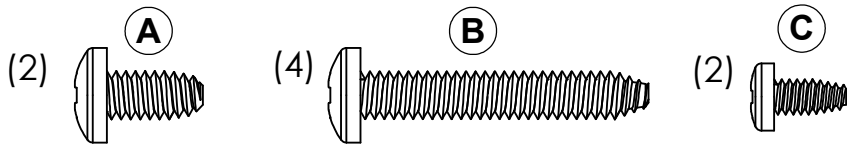  


8

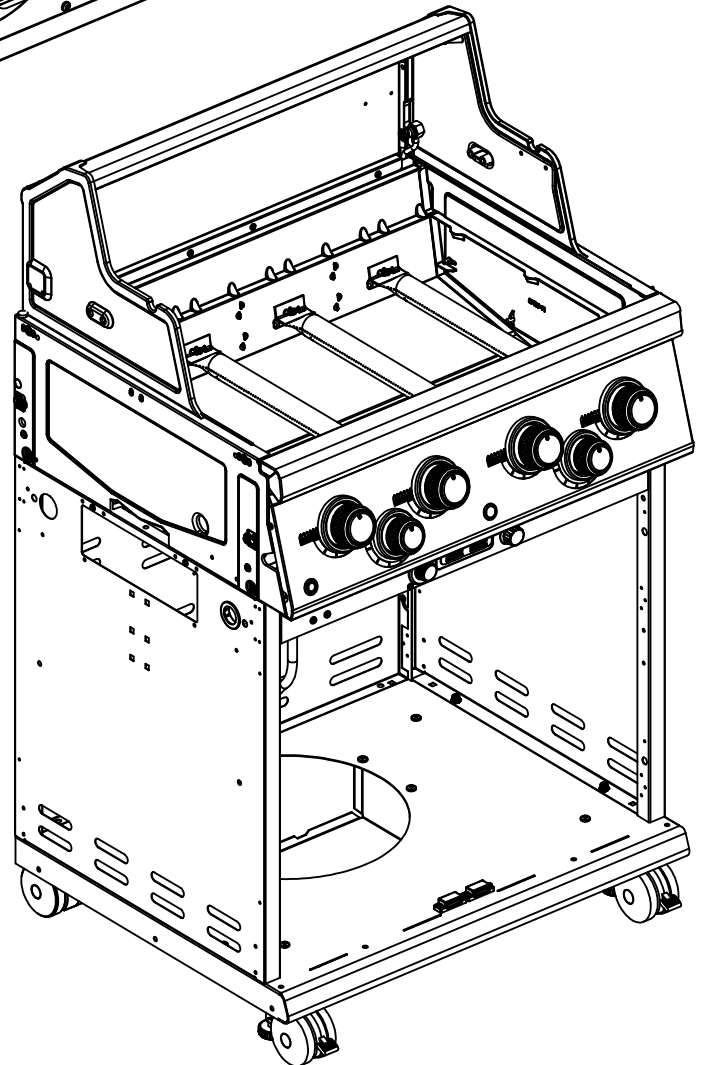 
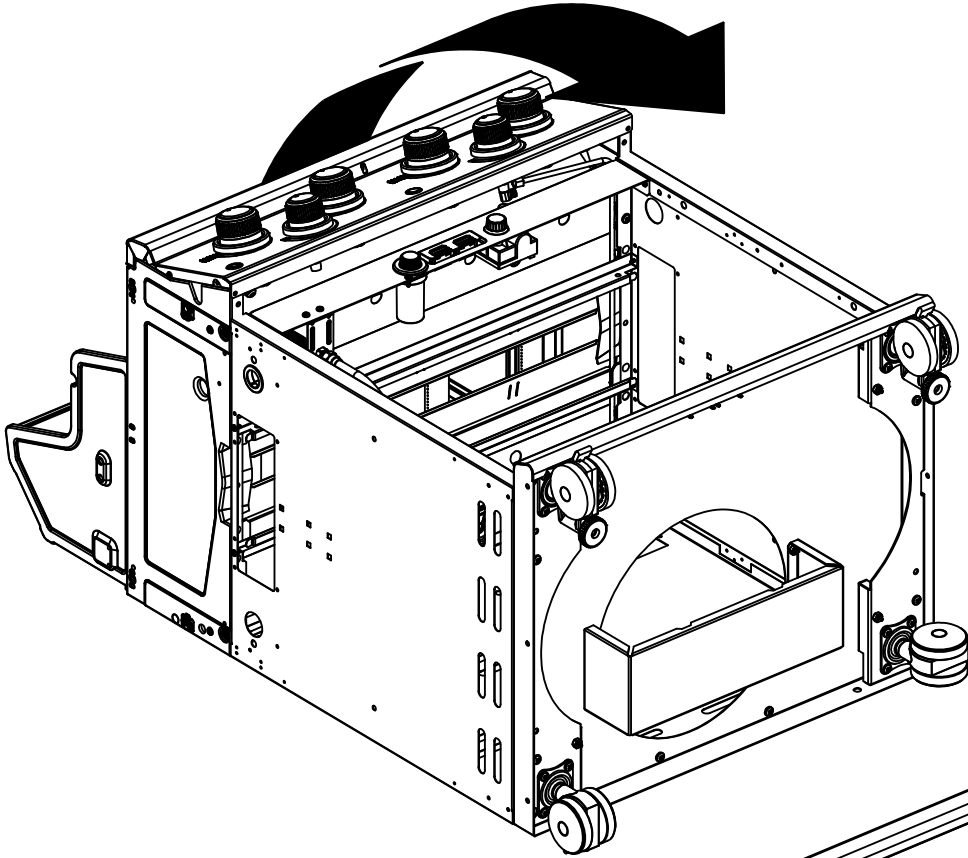 


9

 (4)






  (4)


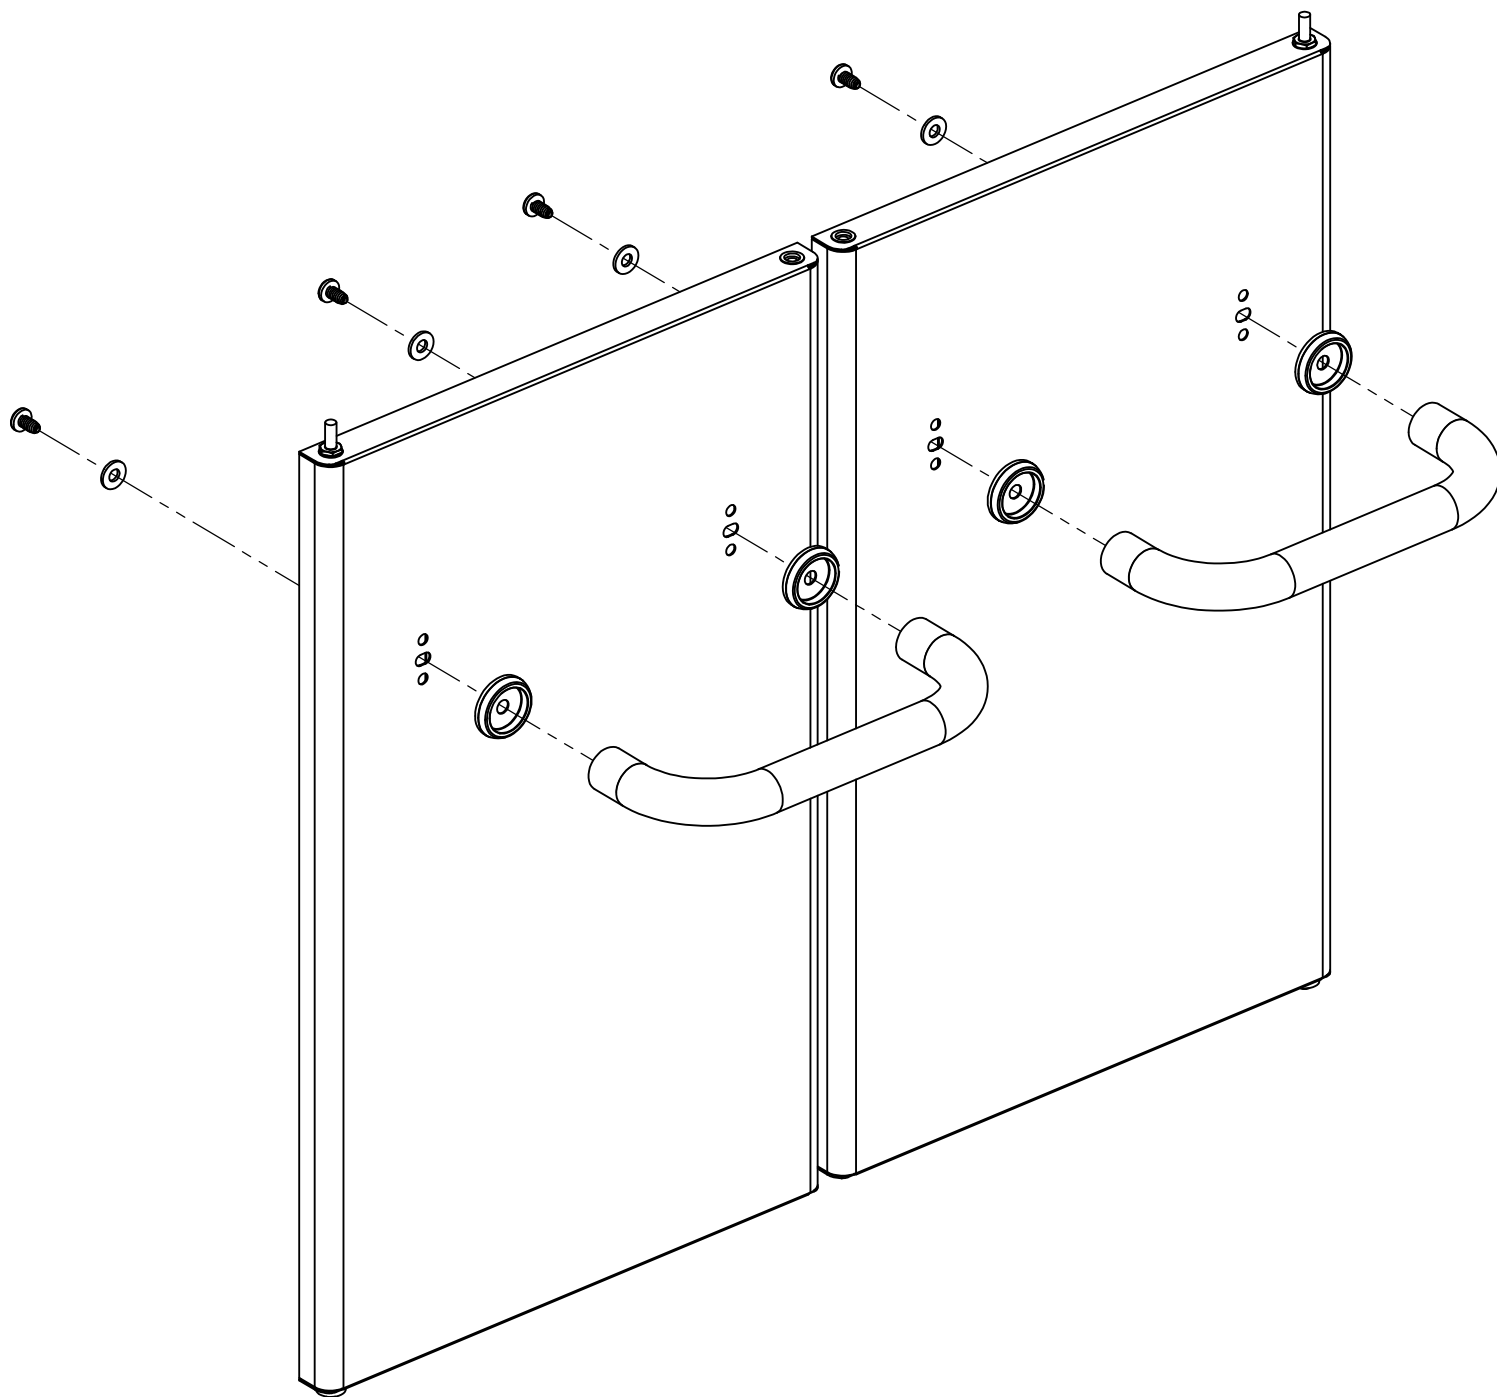
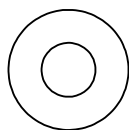


10

 
 
 
(2)

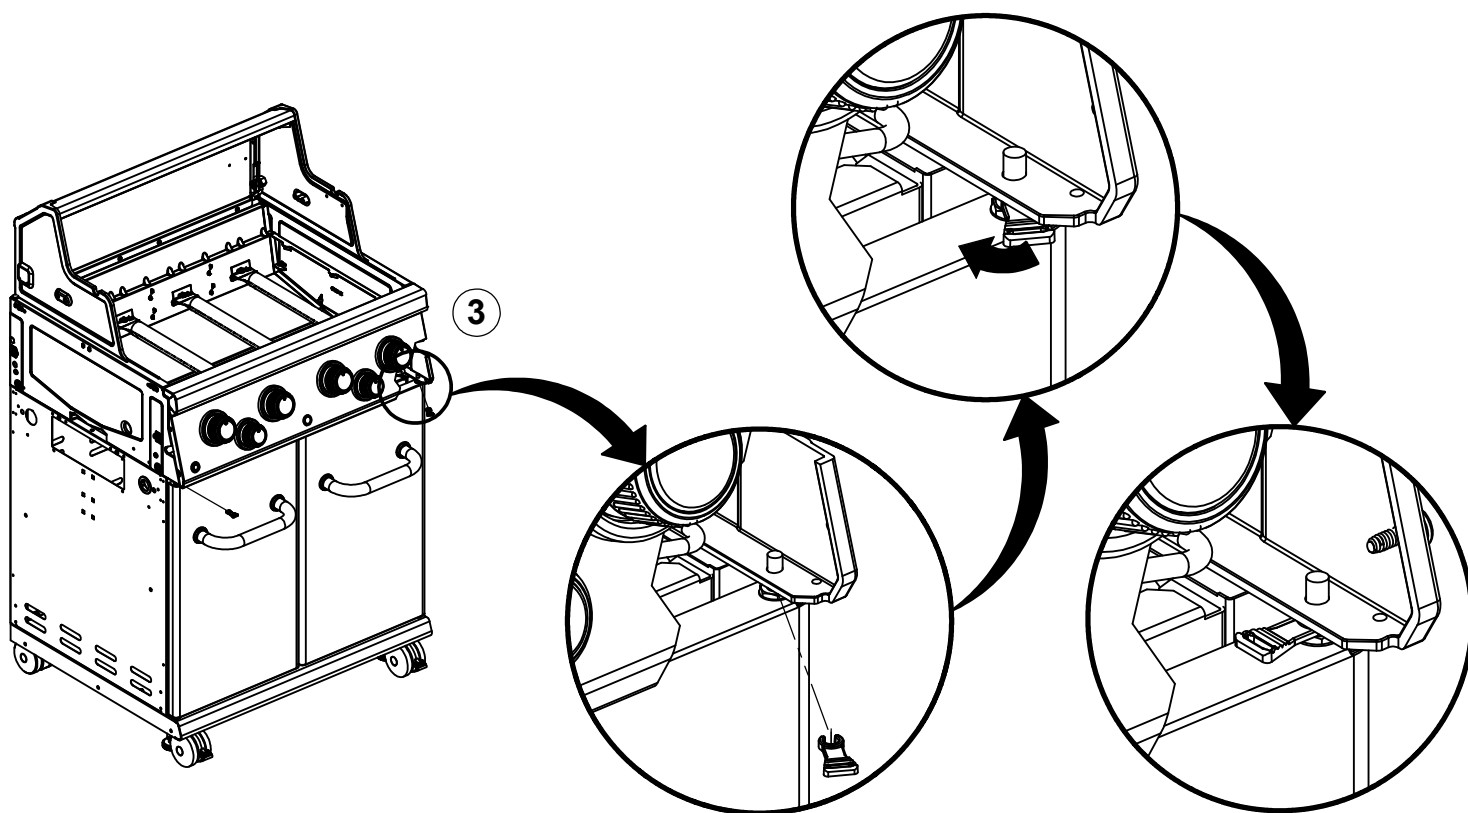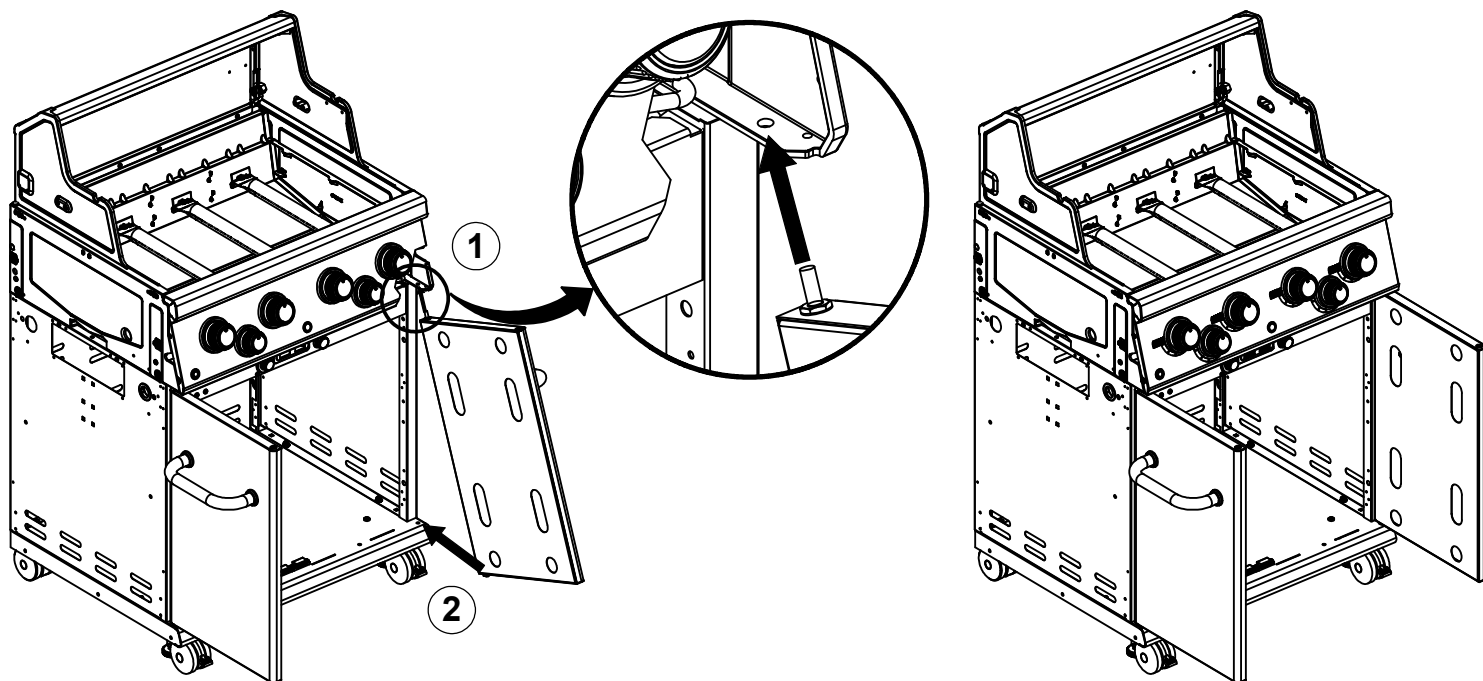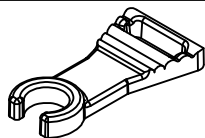

11

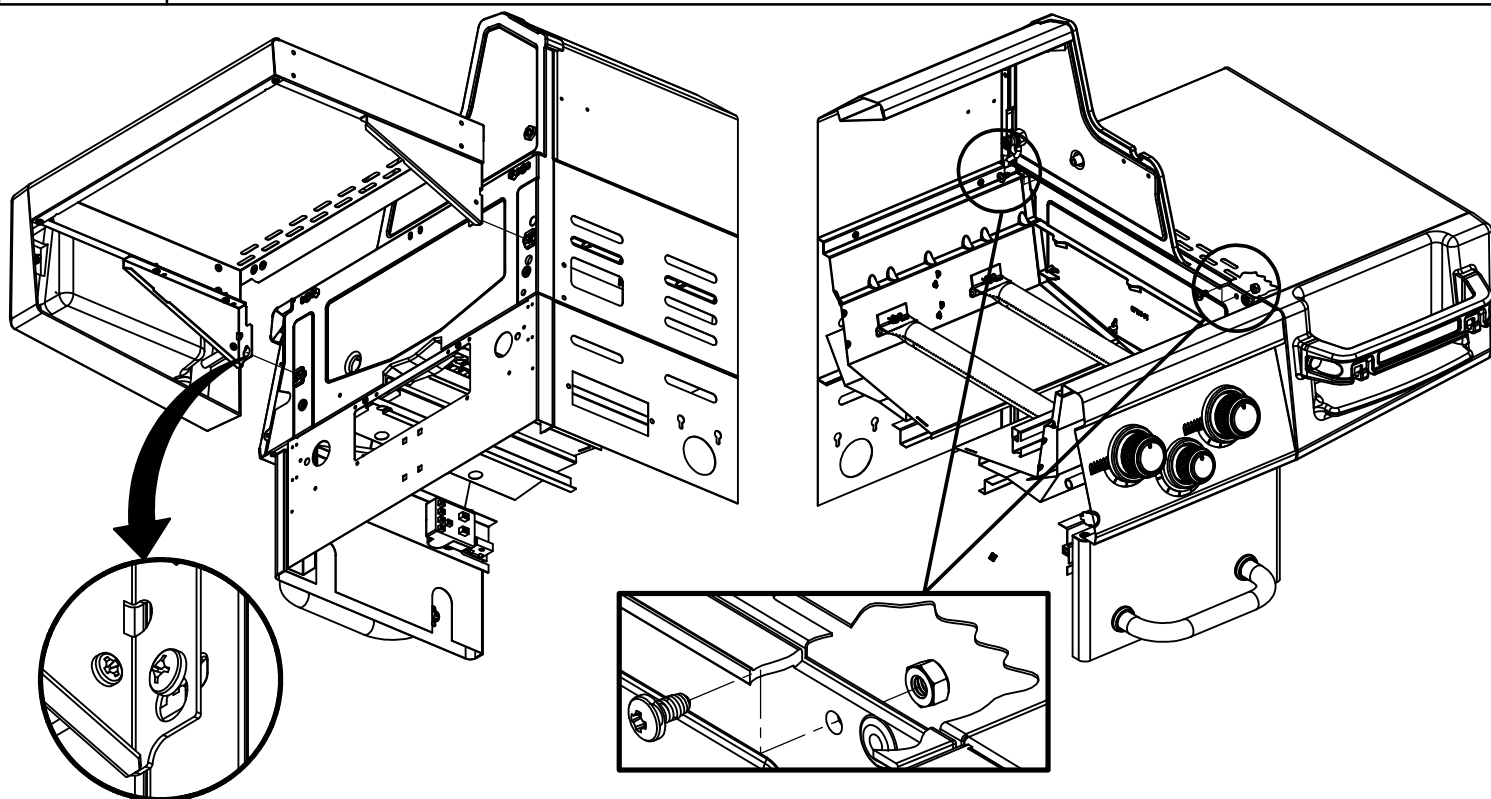   



12

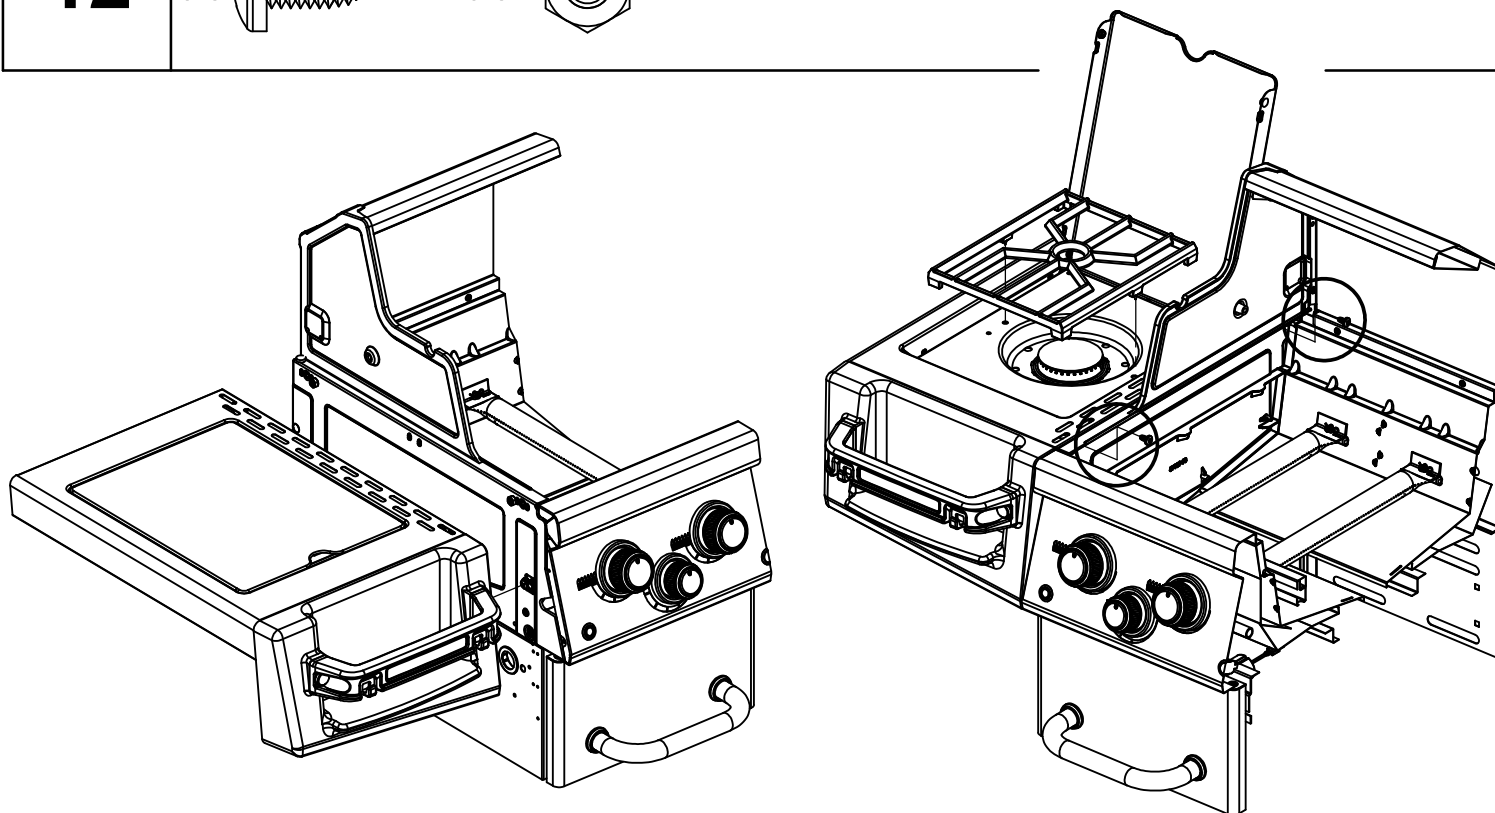   


13

9562-82 9562-83 9562-63NZ
9563-22 9563-23 9562-83NZ
9563-42 9563-43

  
(1)

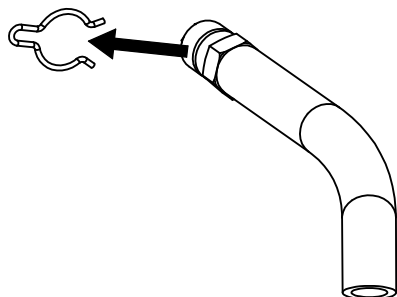


1

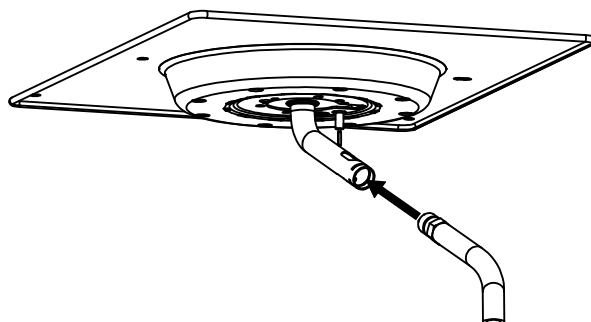 


2

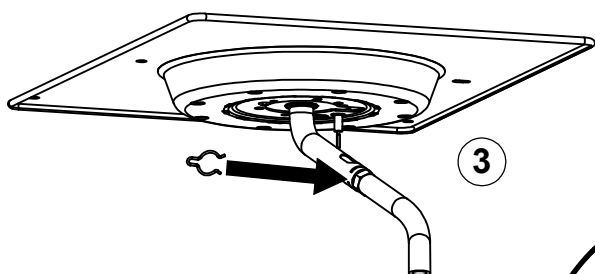 


3






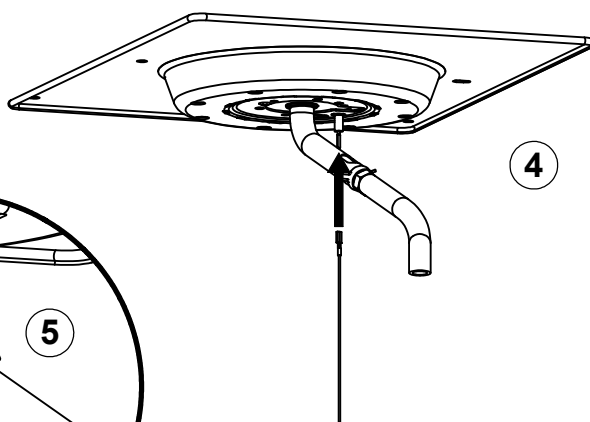 


4


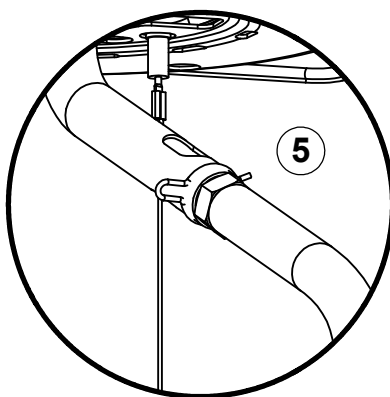 



5

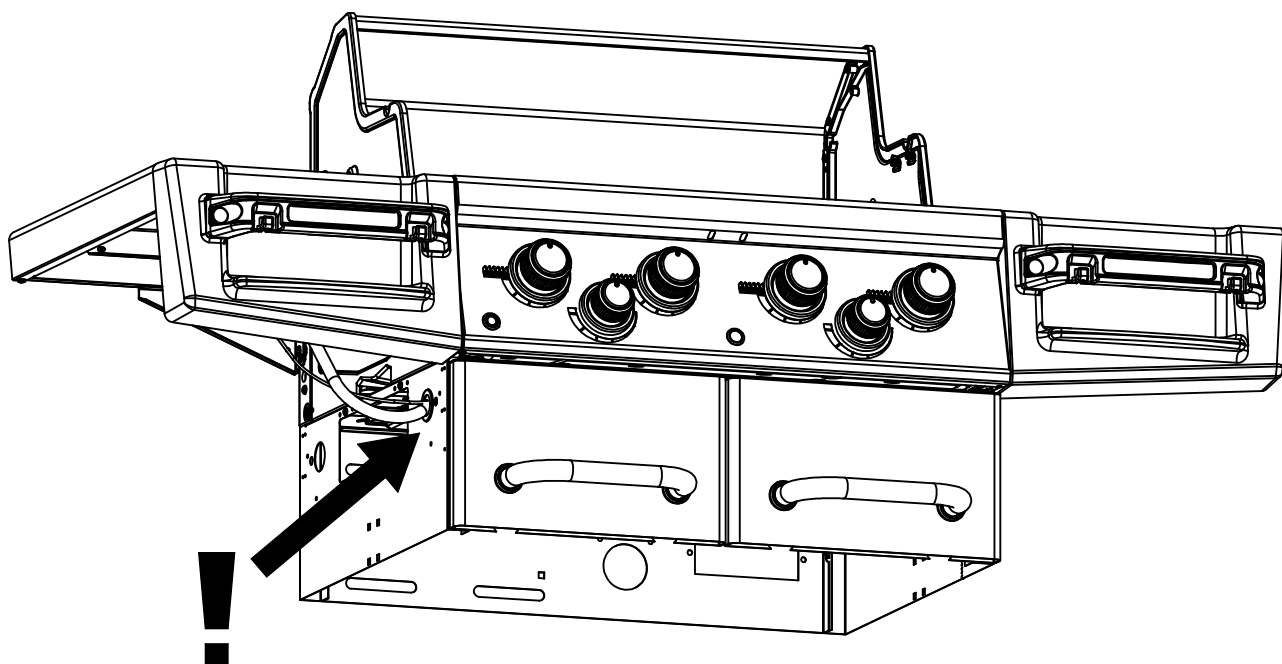 


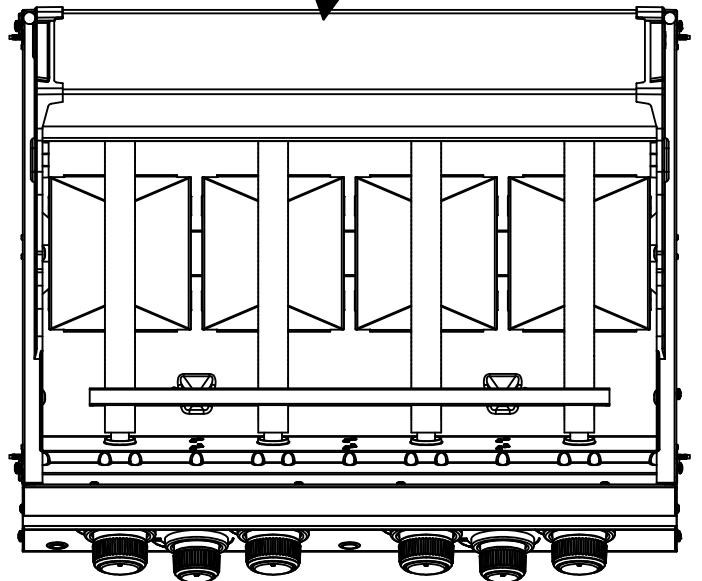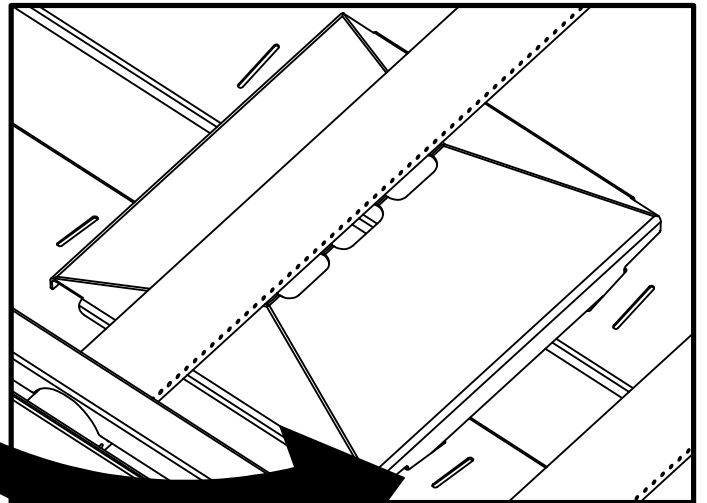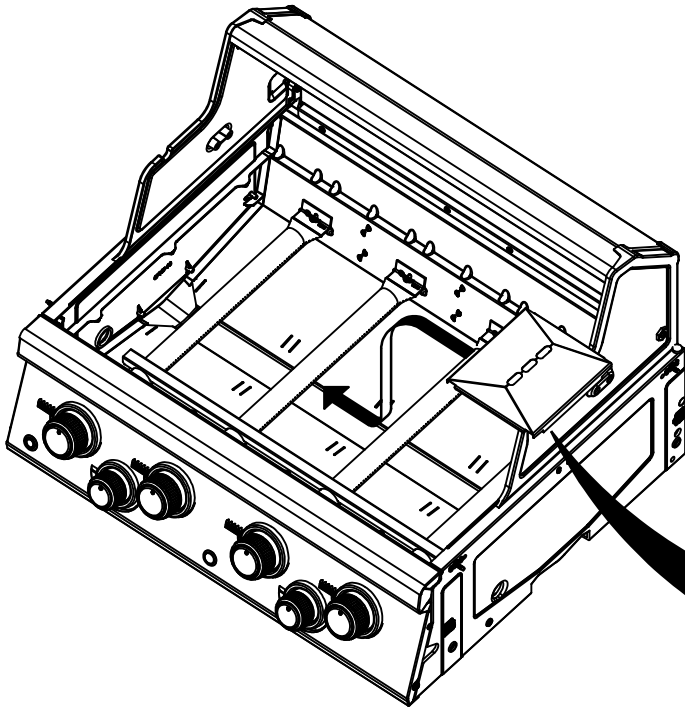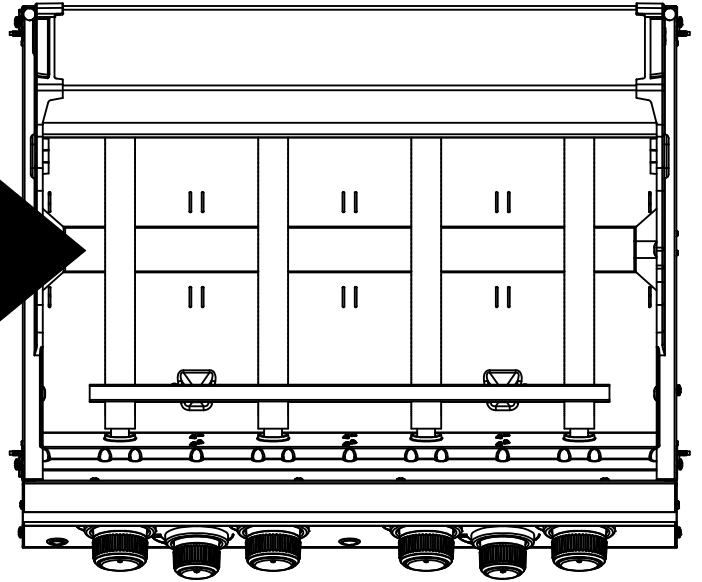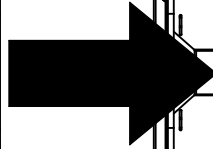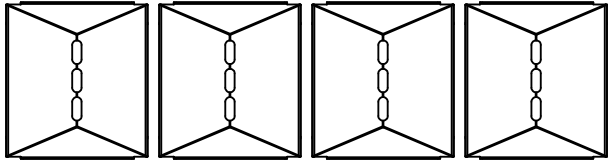      


15

    
(2)  (2) 

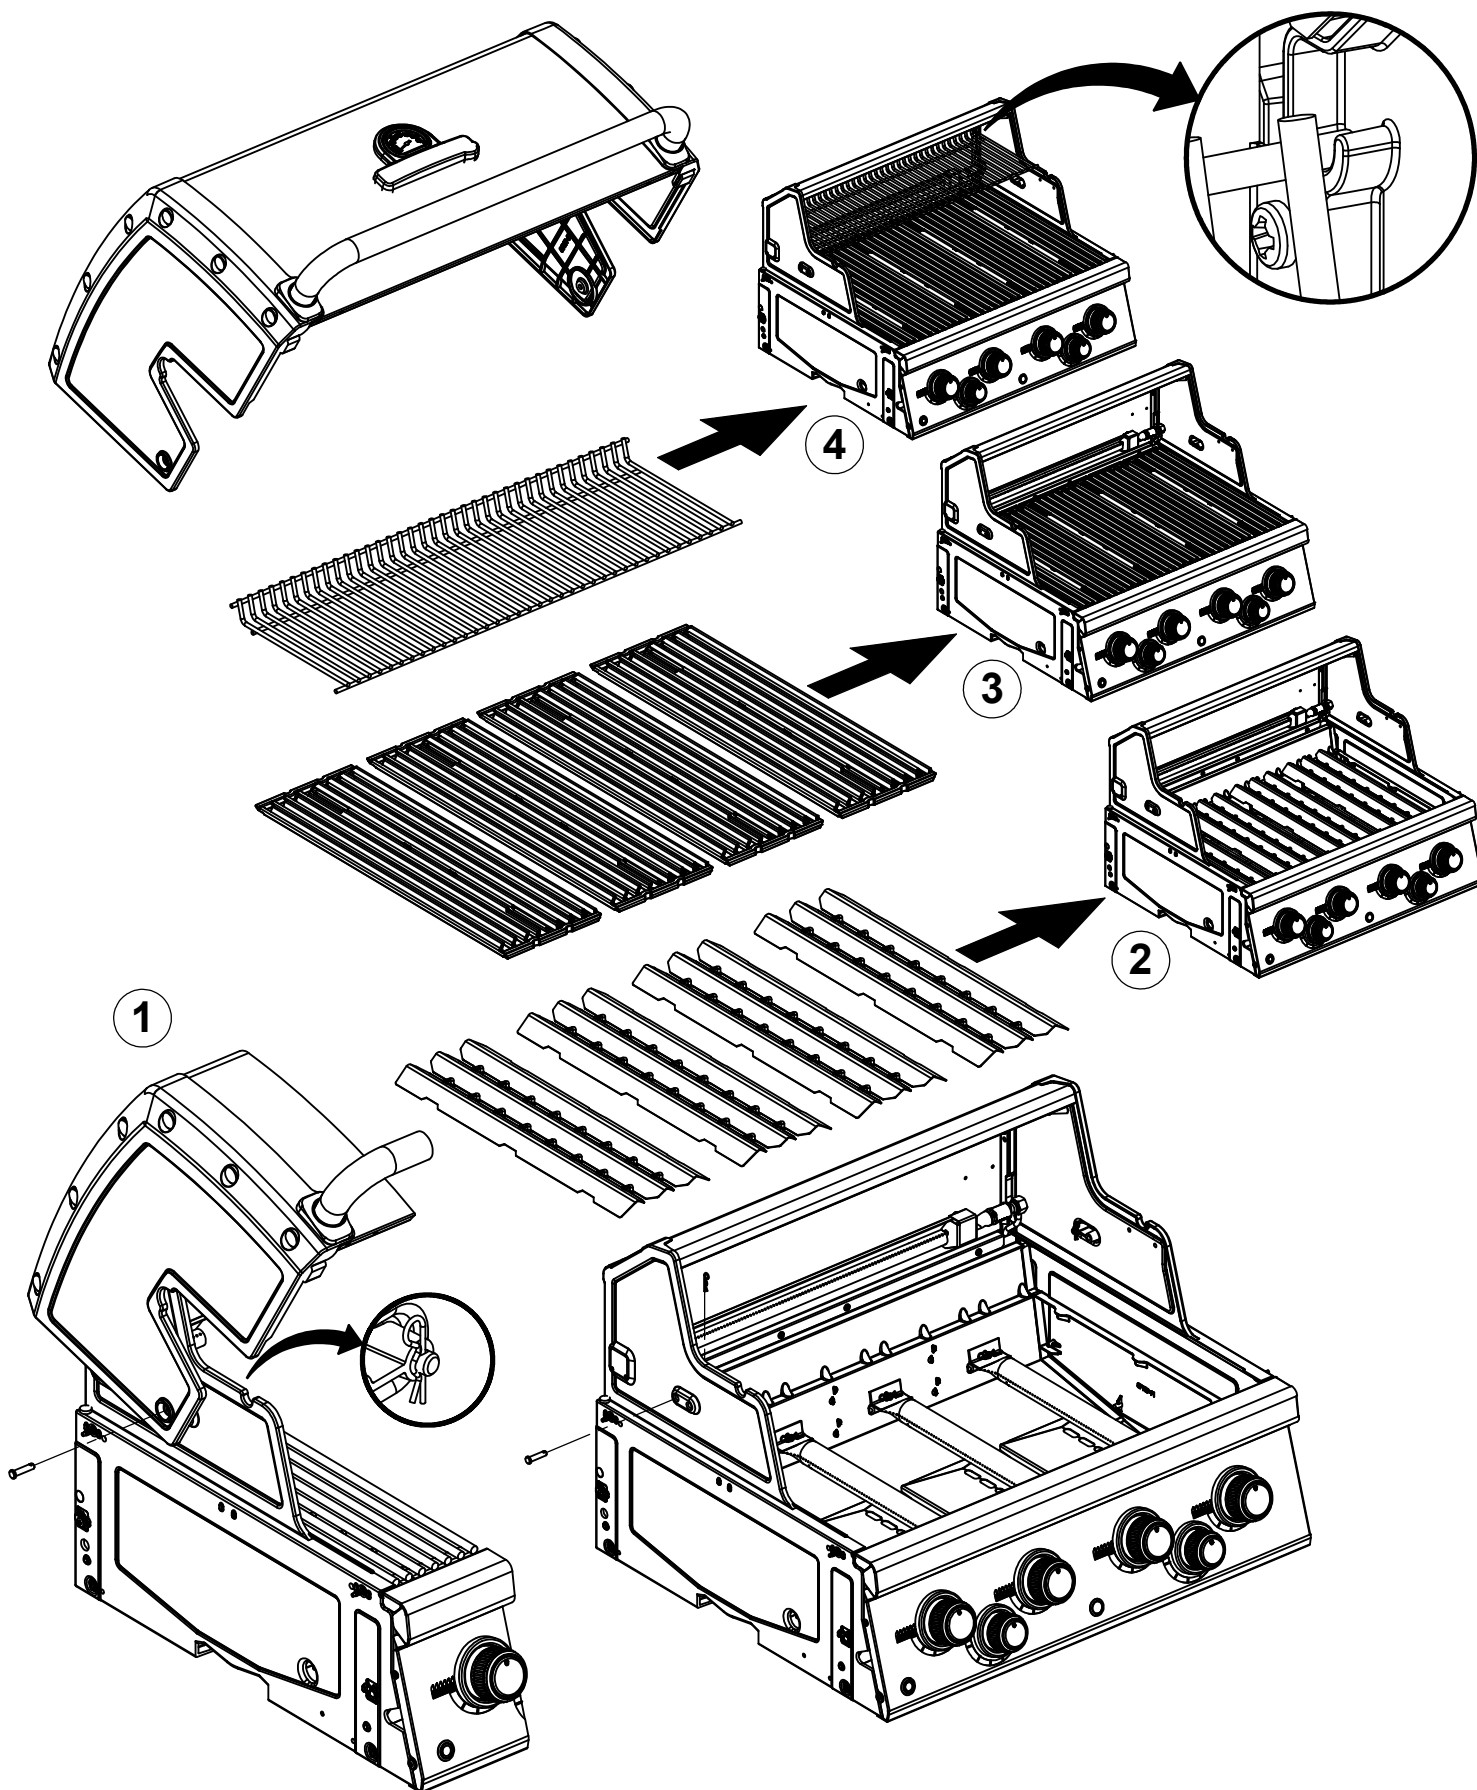

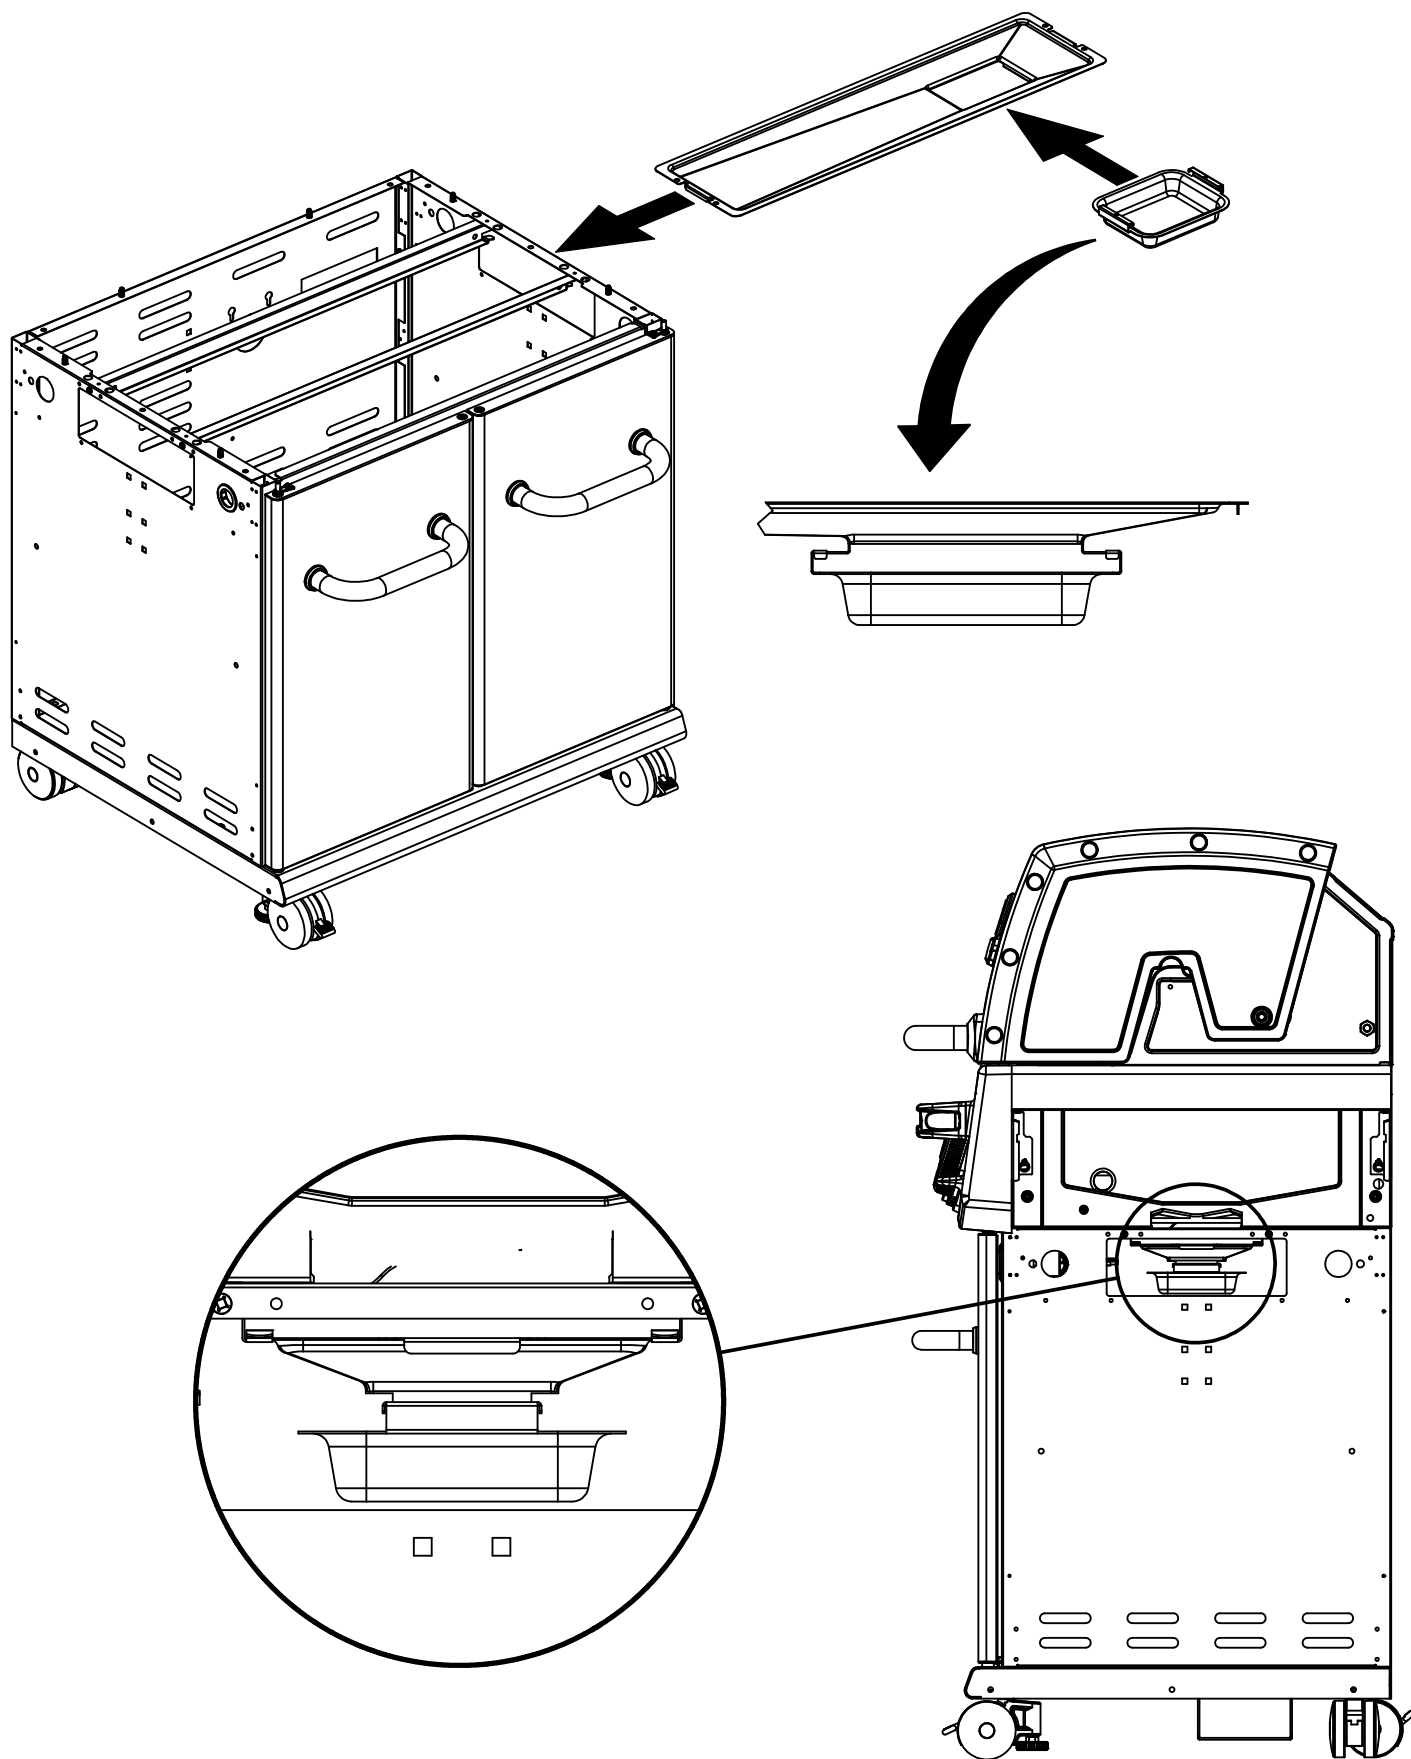


17

  (1)  (1)

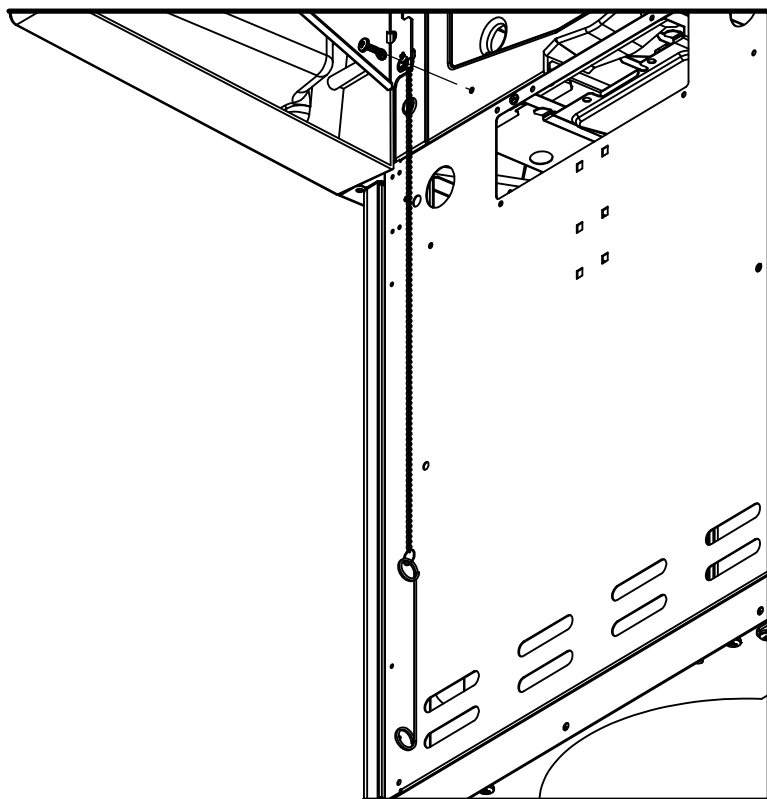



18

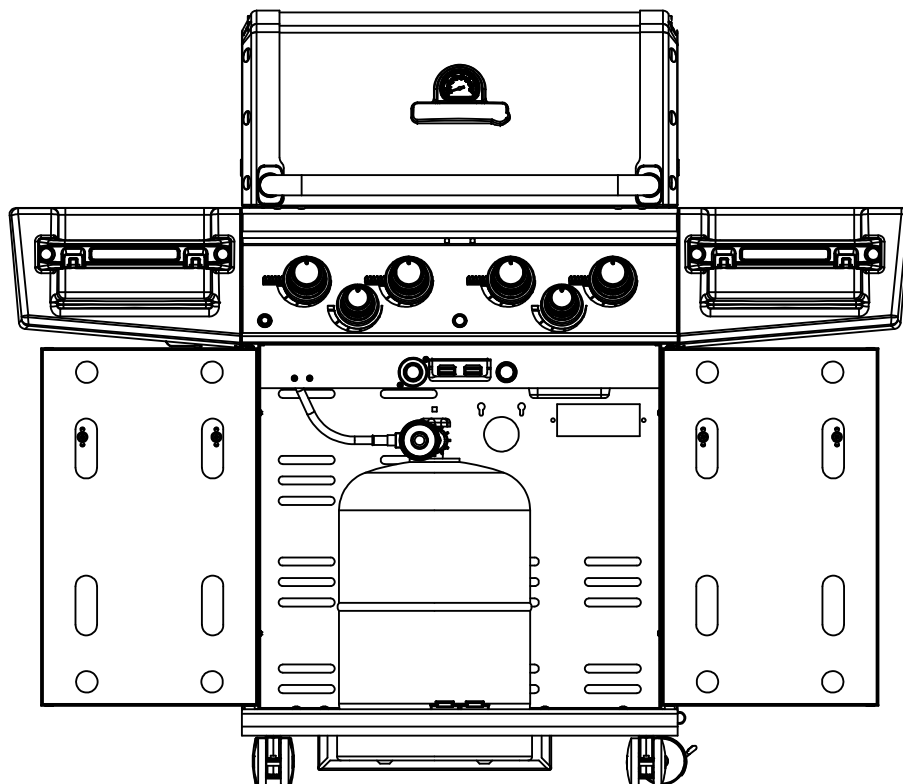 

19

 9562-82 9562-83NZ
9562-83
9563-42
9563-43

 (2)  (2) 

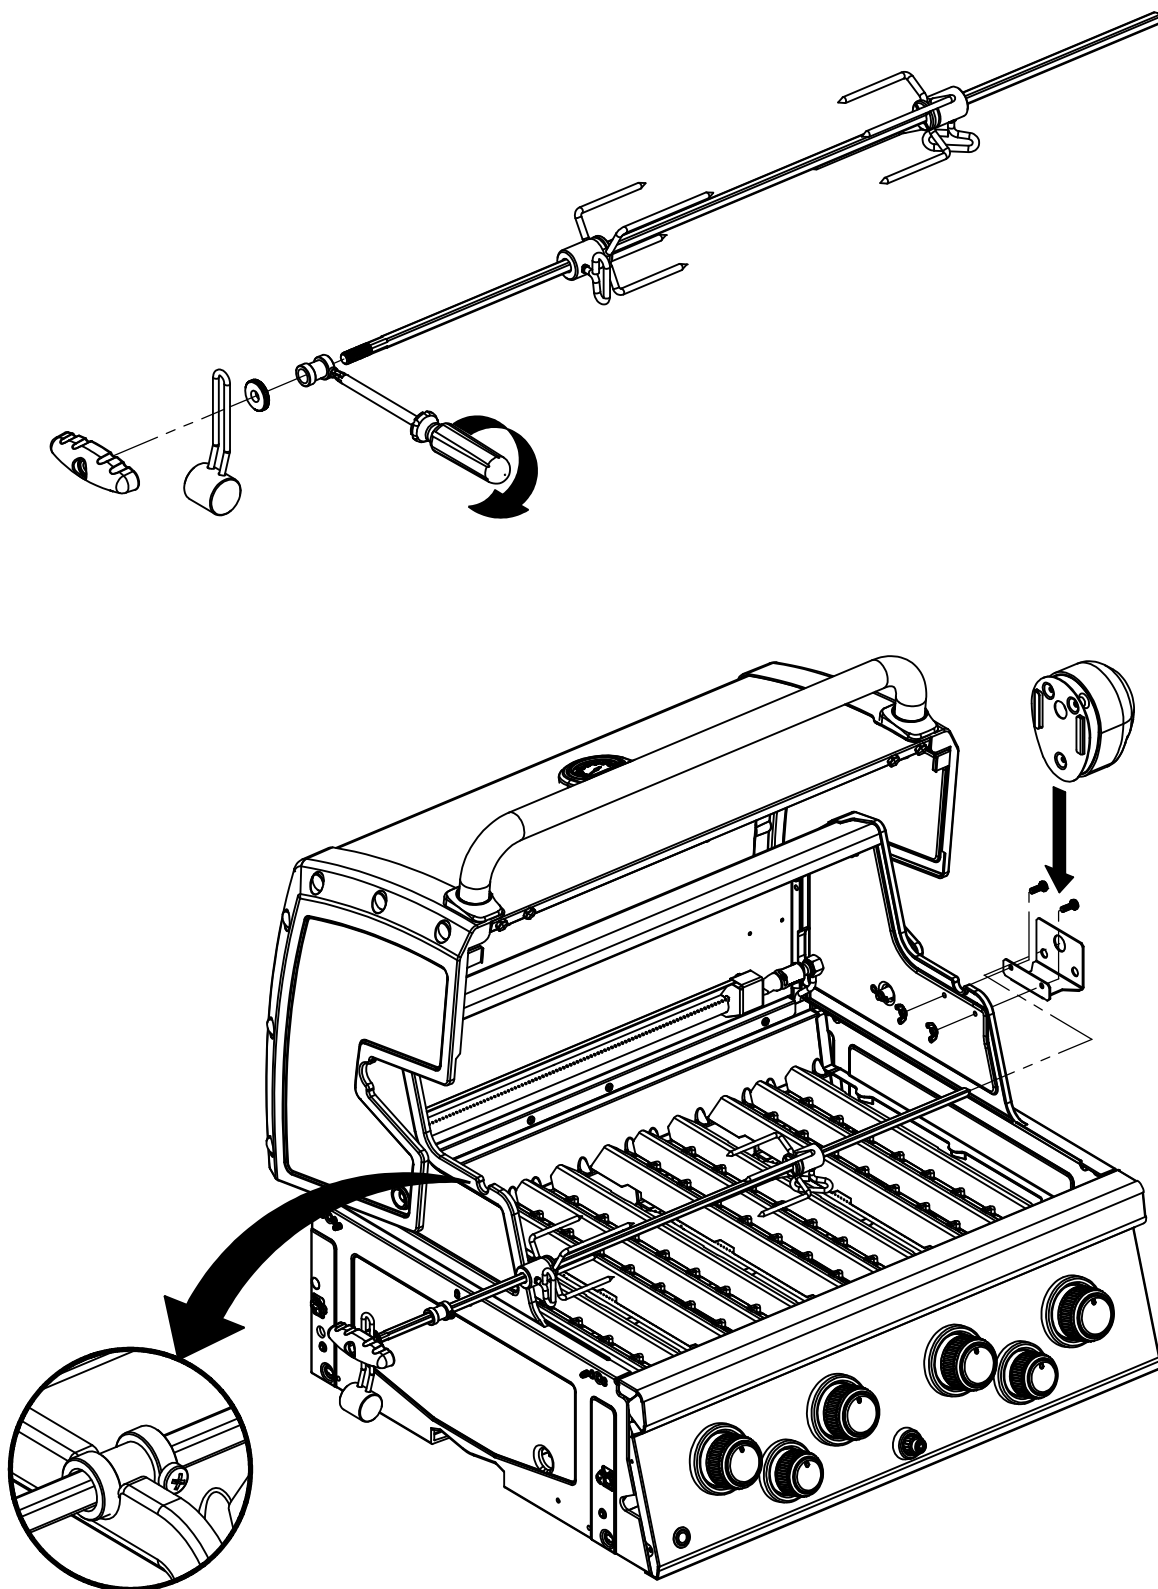

PARTS LIST / LISTE DES PIÈCES

KEY #	ITEM #	DESCRIPTION	9562-52	9562-53	9562-63NZ	9562-82	9562-83	9562-83NZ	9563-12	9563-13	9563-22	9563-23	9563-42	9563-44
1	87109-931	PANEL - SIDE LEFT	1	1	1	1	1	1	1	1	1	1	1	1
2	87109-911	PANEL - SIDE RIGHT	1	1	1	1	1	1	1	1	1	1	1	1
3	27205-014	PANEL - FRONT INNER	1	1	1	1	1	1	1	1	1	1	1	1
4	27205-924R	PANEL - INNER REAR	1	1	1	1	1	1	1	1	1	1	1	1
5	27249-904	GREASE SHIELD	4	4	4	4	4	4	4	4	4	4	4	4
6	27005-91	HEAT SHIELD	3	3	3	3	3	3	3	3	3	3	3	3
7	Y-11544	BURNER SCREW	4	4	4	4	4	4	4	4	4	4	4	4
8	S21242	CLIP	4	4	4	4	4	4	4	4	4	4	4	4
10	82305-021R	PANEL - REAR COOKBOX	1	1	1	1	1	1	1	1	1	1	1	1
12	82315-021	PANEL - HOOD	1	1	1	1	1	1	1	1	1	1	1	1
18	22005-281	GRID	4	4	4	4	4	4	•	•	•	•	•	•
	22022-284	GRID	•	•	•	•	•	•	2	2	2	2	2	2
20	22005-991	GRID - WARMING RACK	1	1	1	1	1	1	1	1	1	1	1	1
22	22225-014	COLLECTOR BOX - FRONT LOWER	1	1	1	1	1	1	1	1	1	1	1	1
24	22215-014	COLLECTOR BOX - FRONT UPPER	1	1	1	1	1	1	1	1	1	1	1	1
25	22909-104D	BURNER	4	•	•	4	•	•	4	•	4	•	4	•
	22909-104E	BURNER	•	4	4	•	4	4	•	4	•	4	•	4
26	22001-769	CONTROL KNOB	4	4	4	4	4	4	4	4	4	4	4	4
26A	22001-669	CONTROL KNOB	•	•	1	2	2	2	•	•	1	1	2	2
27	22002-264	CONTROL BEZEL	4	4	4	4	4	4	4	4	4	4	4	4
27A	22001-164	CONTROL BEZEL	•	•	1	2	2	2	•	1	1	1	2	2
28	22005-814	CONTROL COVER	1	1	•	•	•	•	1	1	•	•	•	•
	22005-834	CONTROL COVER	•	•	1	•	•	•	•	•	1	1	•	•
	22005-884	CONTROL COVER	•	•	•	1	1	1	•	•	•	•	1	1
32	10111-15A	HOSE	1	1	1	1	1	1	1	1	1	1	1	1
34	S13473-073	HOSE-SIDE BURNER	•	•	•	1	•	•	•	•	1	•	1	•
	S13473-079	HOSE-SIDE BURNER	•	•	•	1	1	1	•	•	•	1	•	1
34A	Y-11230	CLIP	•	•	1	1	1	1	•	•	1	1	1	1
35	29005-012	CONTROL ASSEMBLY	1	•	•	•	•	•	1	•	•	•	•	•
	29005-015	CONTROL ASSEMBLY	•	1	•	•	•	•	•	1	•	•	•	•
	29005-032	CONTROL ASSEMBLY	•	•	•	•	•	•	•	•	1	•	•	•
	29005-034	CONTROL ASSEMBLY	•	•	1	•	•	•	•	•	•	•	•	•
	29005-035	CONTROL ASSEMBLY	•	•	•	•	•	•	•	•	•	1	•	•
	29005-072	CONTROL ASSEMBLY	•	•	•	1	•	•	•	•	•	•	1	•
	29005-074	CONTROL ASSEMBLY	•	•	•	•	•	1	•	•	•	•	•	•
	29005-075	CONTROL ASSEMBLY	•	•	•	•	•	•	•	•	•	•	•	1
36	10342-T18	ELECTRODE – SIDE BURNER	•	•	1	1	1	1	•	•	1	1	1	1
37	20809-957	REAR BURNER GAS TRAIN	•	•	•	1	1	1	•	•	•	1	1	1
38	Y-11990	NUT - REAR BURNER	•	•	•	1	1	1	•	•	•	•	1	1
43	10342-E13	ELECTRODE	2	2	2	2	2	2	2	2	2	2	2	2
44	10342-42	ELECTRONIC IGNITOR - DOUBLE	1	1	•	•	•	•	1	1	•	•	•	•
	10342-43	ELECTRONIC IGNITOR - TRIPLE	•	•	1	•	•	•	•	•	1	•	•	•
	10342-44	ELECTRONIC IGNITOR - QUAD	•	•	•	1	•	•	•	•	•	•	1	•
44A	25070-92	IGNITOR WIRE HARNESS	1	1	1	1	1	1	1	1	1	1	1	1
44B	25070-93	IGNITOR BUTTON	1	1	1	1	1	1	1	1	1	1	1	1
47	21035-991	GREASE RAIL	2	2	2	2	2	2	2	2	2	2	2	2
48	22009-901	GREASE PAN	1	1	1	1	1	1	1	1	1	1	1	1
49	27055-901	GREASE TRAY	1	1	1	1	1	1	1	1	1	1	1	1
51	22209-904	FLAV-R-WAVE®	4	4	4	4	4	4	4	4	4	4	4	4

KEY #	ITEM #	DESCRIPTION
		9562-52 9562-53 9562-63NZ 9562-82 9562-83 9562-83NZ 9563-12 9563-13 9563-22 9563-23 9563-42 9563-43

KEY #	ITEM #	DESCRIPTION	9562-52	9562-53	9562-63NZ	9562-82	9562-83	9562-83NZ	9563-12	9563-13	9563-22	9563-23	9563-42	9563-44
52	86101-631	SIDE PANEL - CRESENT LEFT	1	1	1	1	1	1	1	1	1	1	1	1
53	86101-611	SIDE PANEL - CRESENT RIGHT	1	1	1	1	1	1	1	1	1	1	1	1
54	86305-611	LID - OUTER PANEL	1	1	1	1	1	1	•	•	•	•	•	•
	86305-614	LID - OUTER PANEL	•	•	•	•	•	•	1	1	1	1	1	1
55	86205-61	LID - INNER PANEL	1	1	1	1	1	1	1	1	1	1	1	1
56	24005-12A	HANDLE	1	1	1	1	1	1	1	1	1	1	1	1
58	54009-936	HANDLE - BEZEL	2	2	2	2	2	2	2	2	2	2	2	2
59	10081-BK630	NAMEPLATE	1	1	1	1	1	1	1	1	1	1	1	1
60	10571-6	HEAT INDICATOR	1	1	1	1	1	1	1	1	1	1	1	1
65	20005-000	MATCH LIGHT - STICK	1	1	1	1	1	1	1	1	1	1	1	1
68	22275-111A	DOOR	1	1	1	1	1	1	•	•	•	•	•	•
	22275-114A	DOOR	•	•	•	•	•	•	1	1	1	1	1	1
69	22275-131A	DOOR	1	1	1	1	1	1	•	•	•	•	•	•
	22275-134A	DOOR	•	•	•	•	•	•	1	1	1	1	1	1
70	21071-13	HANDLE	2	2	2	2	2	2	2	2	2	2	2	2
71	21070-13	HANDLE - BEZEL	4	4	4	4	4	4	4	4	4	4	4	4
78	21335-111	BRACKET - DOOR CATCH	1	1	1	1	1	1	1	1	1	1	1	1
80	21109-905R	SIDE PANEL	2	2	2	2	2	2	2	2	2	2	2	2
88	21305-925R	PANEL - REAR	1	1	1	1	1	1	1	1	1	1	1	1
90	21795-935	BASE	1	1	1	1	1	1	1	1	1	1	1	1
100	21039-911	BRACKET – CASTOR SUPPORT	2	2	2	2	2	2	2	2	2	2	2	2
101	21039-301	LOWER TANK SUPPORT	1	1	1	1	1	1	1	1	1	1	1	1
102	10892-23	CASTOR	2	2	2	2	2	2	2	2	2	2	2	2
102A	10892-285	CASTOR	2	2	2	2	2	2	2	2	2	2	2	2
110	23030-631	SHELF BRACKET	2	2	2	2	2	2	2	2	2	2	2	2
111	23030-611	SHELF BRACKET	2	2	2	2	2	2	2	2	2	2	2	2
114	23101-614	SHELF	1	1	1	1	1	1	1	1	1	1	1	1
115	23100-654	SHELF - SB	•	•	1	1	1	1	•	•	1	1	1	1
	23101-614	SHELF	1	1	•	•	•	•	1	1	•	•	•	•
116	23401-631	SHELF FRONT	1	1	1	1	1	1	1	1	1	1	1	1
116A	23401-611	SHELF FRONT	1	1	1	1	1	1	1	1	1	1	1	1
117	23009-608	HANDLE	2	2	2	2	2	2	2	2	2	2	2	2
123	Y-12117	SIDE BURNER LID STOP	•	•	2	2	2	2	•	•	2	2	2	2
124	23000-271	SHELF-SIDE BURNER	•	•	1	1	1	1	•	•	1	1	1	1
125	23000-254	COVER-SIDE BURNER	•	•	1	1	1	1	•	•	1	1	1	1
126	10390-R81A	SIDE BURNER	•	•	1	1	1	1	•	•	•	1	•	1
	10390-R81D	SIDE BURNER	•	•	•	•	•	•	•	•	1	•	1	•
128	23009-98	GRID	•	•	1	1	1	1	•	•	1	1	1	1
130	27905-354E	REAR BURNER	•	•	•	1	1	1	•	•	•	1	1	1
131	10693-099	REAR BURNER ORIFICE	•	•	•	1	1	1	•	•	•	1	1	1
133	S15271	ROTISSERIE HANDLE	•	•	•	1	1	1	•	•	•	•	1	1
134	S15270	ROTISSERIE COUNTER BALANCE	•	•	•	1	1	1	•	•	•	•	1	1
135	S15299	ROTISSERIE WASHER	•	•	•	1	1	1	•	•	•	•	1	1
136	S15263	ROTISSERIE BUSHING	•	•	•	1	1	1	•	•	•	•	1	1
137	S15256	ROTISSERIE SPIT ROD	•	•	•	1	1	1	•	•	•	•	1	1
138	S15287	ROTISSERIE FORK	•	•	•	1	1	1	•	•	•	•	1	1
139	57039-901	ROTISSERIE BRACKET	•	•	•	1	1	1	•	•	•	•	1	1
140	S21125	SCREW #8 X 1/2	25	25	25	25	25	25	25	25	25	25	25	25
141	Y-12860	SCREW	2	2	2	2	2	2	2	2	2	2	2	2

PARTS LIST / LISTE DES PIÈCES

[illegible]

